


COVER INSTALLATION

Installation kit includes:


2 Brackets
4 Cement Anchors
2 Rubber Spacers
3 Velcro Tabs
3 Screws

Tools needed:

Hammer Drill
1/8" Drill Bit
5/16" socket or wrench
Permanent Marker
3/16" Masonry Bit



Left Side Bracket

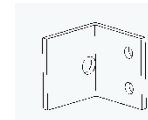

Right Side Bracket



Step 1: Place rubber spacers on top of window well 1 inch away from the house's foundation. (It is optional to screw these rubber spacers to the window well.)

Step 2: Center the window well cover on top of the rubber spacers.



Step 3: Place 2 brackets over the rods extending from the rear of the window well cover. Make sure the bracket is against the cover, straight, and level.

Note: Left bracket has a slot, and the right bracket has a hole.



Step 4: Mark both holes on the two brackets with a permanent marker.

Step 5: Drill all 4 holes with a 3/16" masonry bit and a hammer drill.



Step 6: Using a 5/16" socket wrench, attach 2 brackets to foundation with 4 provided masonry screws.



Step 7: Attach window well cover to brackets.
The window well cover mounts to the brackets by inserting the left rod into the large hole in the left bracket....



and sliding the right rod into the slot in the right bracket.



Step 8: Mark spots near center of window well where supports make contact.



Step 9: Drill three 1/8" holes.



Step 10: Secure 3 Velcro tabs with provided screws.



Step 11: Remove protective plastic sheet.