

Window Installation

(Always Use Job Specific Personal Protective Equipment)

A. Tool List (Suggested)

1. 2 lb. dead blow hammer or rubber mallet
2. Spring clamp x 4" opening
3. Putty knife
4. Nylon brush
5. 4' level
6. Short pry bar

B. Materials List

1. Trim kit (two jamb fastening strips and one head fastening strip)
2. Engineered wood fiber shims

C. Installation Procedure

1. Clean any concrete build-up and jobsite accumulation from Easy-Buck™, especially around raised tower on all four sides.
2. Check Easy-Buck™ sill for level at top of raised tower. Shim as required.
3. Remove trim kit and screen from window.
4. Check that factory installed sill trim piece is centered. If not, lightly tap with hammer to center.
5. Standing above the well on the outside, lower window into well.
6. From inside the basement, pull window over center tower of Easy-Buck™ and push down firmly in place, ensuring that the bottom of the window is resting on top of the raised tower.
7. Center window left to right.
8. Clamp right jamb of window against Easy-Buck™ approximately 18" up from the bottom.
9. Position right jamb fastening strip (ensure the strip is flush with the bottom strip).
10. Tap fastening strip with dead blow hammer or rubber mallet starting at the bottom while keeping the strip in alignment with window.
11. Repeat steps 9 & 10 on the left side of window (clamp not required on left side).
12. Clamp top of window against buck approximately 18" from right side.
13. Install top fastening strip, working from right to left, removing clamp as necessary.
14. Check window operation. Close and lock the window.
15. Re-install screen.




BASEMENT WINDOW SYSTEMS


Window Install Section

Welcome to the Window Install Section

Make sure window buck is clear of all debris.
Clean seal with a putty knife.

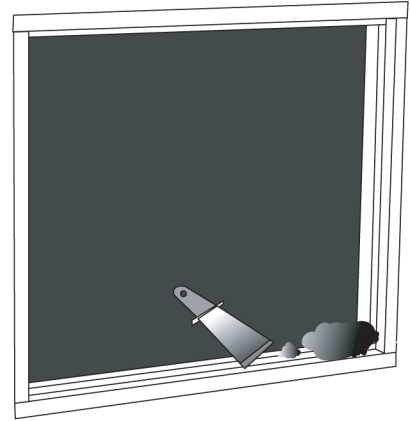

Install window from the outside. Install window over sill using fins located on bottom of window frame.

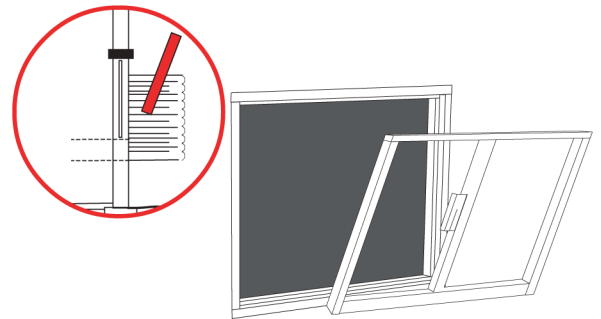

Lock window frame into place from the inside using window locking tabs.

You have now completed the Window Installation.

